

CATEGORIES

[Arduino \(84\)](#)

[Accessories \(25\)](#)

[Boards \(23\)](#)

[Gift Edition \(9\)](#)

[Kits \(6\)](#)

[Shields \(21\)](#)

[Wearable \(4\)](#)

[Workshops \(1\)](#)

[TinkerKit \(48\)](#)

[Components \(67\)](#)

[Kits \(13\)](#)

[Books & Manuals \(4\)](#)

New Products

[Featured Products ...](#)

[All Products ...](#)

INFORMATION

Official prices are in Euros, all the other currencies are provided as a reference.

All prices are given without VAT, VAT will

→ PRODUCT INFO

USB/serial converter without headers

Code: **A000015**

This board converts a standard USB connection to the 5V TX and RX an Arduino requires for communication. You can connect straight to the Arduino Mini or other microcontrollers, allowing them to talk to the computer.



This version of the module has no pins soldered on it.

It is based on the FT232RL chip from FTDI (drivers are included with the Arduino software).

[Datasheet](#)

[FT232RL](#)



COMMENTS

You must be logged in to post a comment.

VOLUME DISCOUNT PRICING

Add to Cart:

[ADD THIS TO MY CART](#)

be added on checkout.

[SHIPPING & RETURNS](#) | [PRIVACY NOTICE](#) | [CONDITIONS OF USE](#) | [SELL](#) | [CONTACT US](#) | [DISCOUNT COUPONS](#) | [NEWSLETTER UNSUBSCRIBE](#)

© 2013 [Arduino Store](#) | Powered by [Zen Cart](#)

